


displacar

centro de formación PRL

Vitoria-Gasteiz - ALAVA (SPAIN)
t.: +34 945 28 13 25

displacar@displacar.es
www.displacar.es


1a

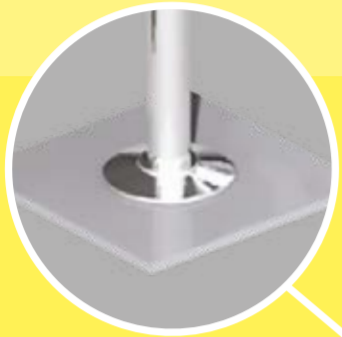

1b+




1b

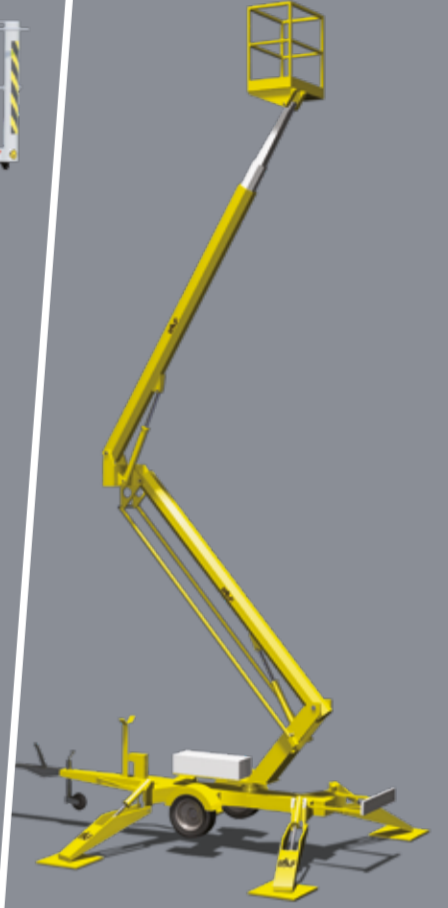


3a

3a+

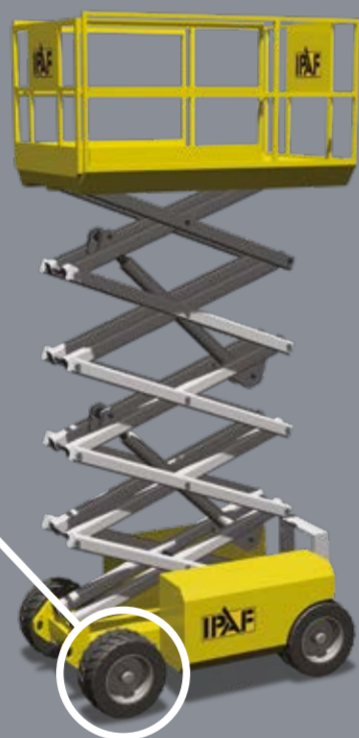

3b+

3b

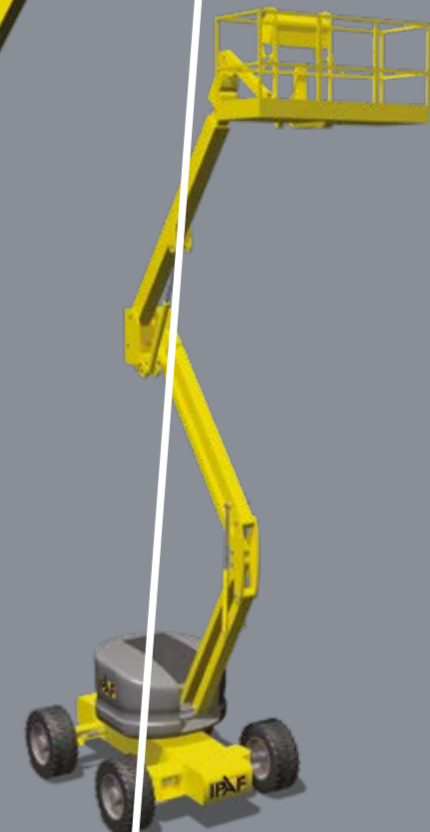

H



MCWP



GH

TPH

PH



PAV



IAD



MM

